


# BMW System 6 EVO Helmets


## Removing the inner visor screen

If light passes through a medium of a different density, approx. 4 % of light is reflected every time. This effect occurs on the outer pane as well as on the inner pane. The results are increased projections by reflection. This can cause irritation when riding by night or in the rain. If this should be perceived as disturbing, it is advised not to use the inner pane. In this case, the excenter pins in the visor must be replaced with dummy plugs.

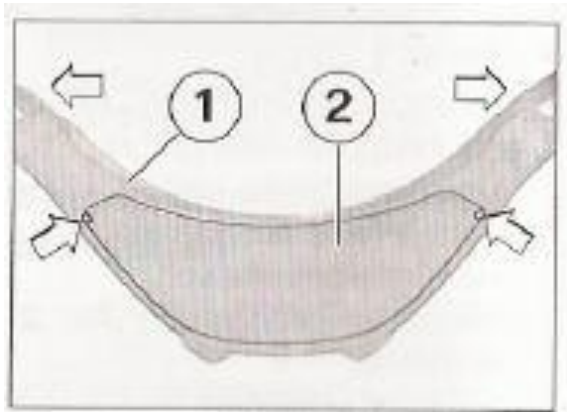

- Slightly over-tension visor ①.
- Lift inner visor pane ② on one side and pull it from the pins (arrows).
- Remove the other side the same way.

## Installing inner visor pane

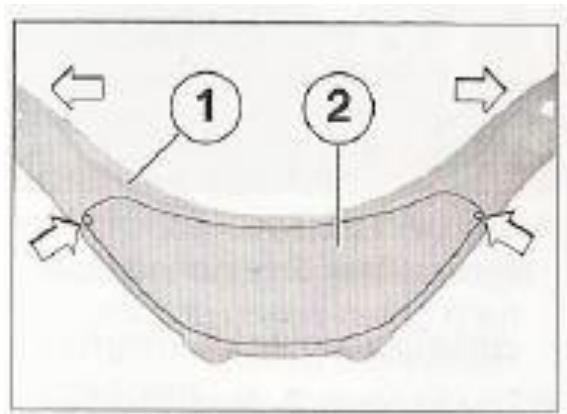

- Clean visor ① thoroughly.
- Slightly over-tension visor ①.
- Secure inner visor pane ② to one of the pins (arrows). Next, secure on the other side. Make sure that the silicone seal has clean contact with the visor.  
→ Silicone seal has not clean contact with the visor
- Remove excenter pins **carefully** and install them the other way around.